

# JUNG PUMPEN FLUTBOX

## ERSTE HILFE BEI HOCHWASSER

**DAS ORIGINAL**

### VIelfältig einsetzbar

#### OHNE TRAGEKORB


Die U5KS kann selbstverständlich auch ohne Tragekorb eingesetzt werden. Lösen Sie dafür die Halterung am Pumpengriff und entnehmen Sie die Pumpe.

#### FLACHABSAUGUNG

Der Siebfuß der Pumpe lässt sich abnehmen. Dadurch ist ein Abpumpen auf geringste Restwassermenge möglich.

#### FÜR'S GROBE

Möchten Sie den gesamten freien Durchgang der U5KS von 20 mm nutzen, entfernen Sie den Siebfuß und stecken Sie die beiliegenden Verlängerungen auf die Standfüße.

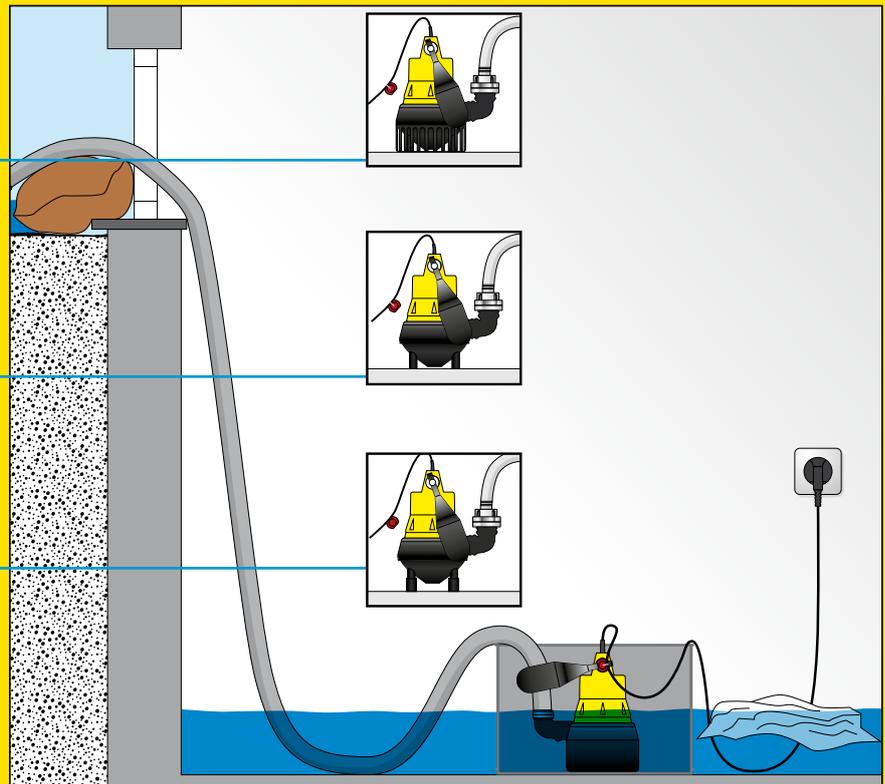

### Die einfache Bedienung in drei Schritten:



#### SCHRITT 1:

Schließen Sie den Schlauch an der C-Kupplung an und führen ihn nach draußen. Vermeiden Sie Knicke, um maximalen Durchfluss zu ermöglichen!



#### SCHRITT 2:

Um die Pumpe im Dauerbetrieb fördern zu lassen, fixieren Sie den Schwimmerschalter durch aufstecken der roten Kappe. Schließen Sie nun das Stromkabel an.



#### SCHRITT 3:

Die Pumpe fördert jetzt! In der Betriebsanleitung der Pumpe finden Sie weitere Informationen zu den Einsatzmöglichkeiten der U5KS.

**Aufbewahrung:** Mit den beiliegenden Haken kann der Korb auch an die Wand gehängt werden. Abstand Bohrlöcher: 330 mm

# JUNG PUMPEN FLUTBOX FLOOD EMERGENCY KIT



## CAN BE USED IN LOTS OF APPLICATIONS

### WITHOUT CARRYING CAGE


Naturally the U5KS can be used without the carrying cage. To do this detach the metal clip on the pump handle and remove the pump.

### PUMPING TO EXTRA LOW LEVELS

The foot strainer of the pump can be removed. The pump can now pump down to a minimum of residual water.

### FOR LARGER SOLIDS

If you want to make use of the pump's full free solids passage of 20 mm, remove the foot strainer and push the extensions supplied onto the pedestals.

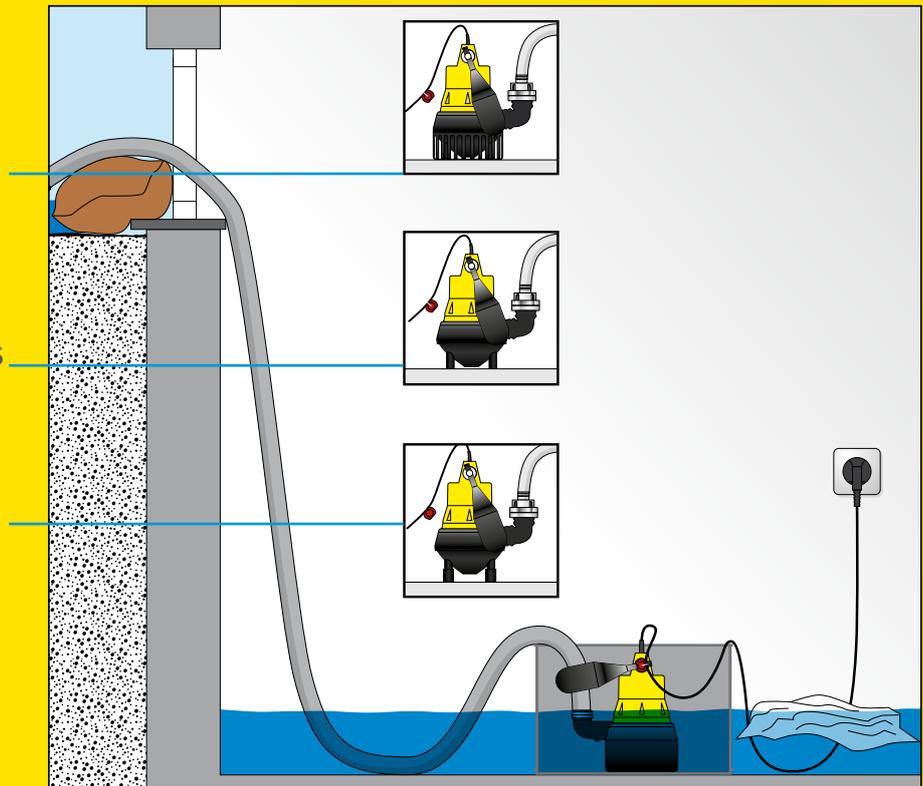

## USAGE OF THE PUMP IN THREE EASY STEPS



### STEP 1:

Attach the hose to the C coupling and bring it to the outside. Avoid kinks in order to achieve maximum flow.



### STEP 2:

In order to make the pump run continuously, fix the float switch in position by fitting the red cap. The power cable can now be connected.



### STEP 3:

The pump is now discharging liquid. In the operating instructions for the pump you will find further information on other applications of the U5KS.

**Storage:** The cage can be mounted on the wall with the enclosed fastenings. Distance between drill holes: 330 mm